



ASSEMBLY INSTRUCTIONS

zUIVER^o

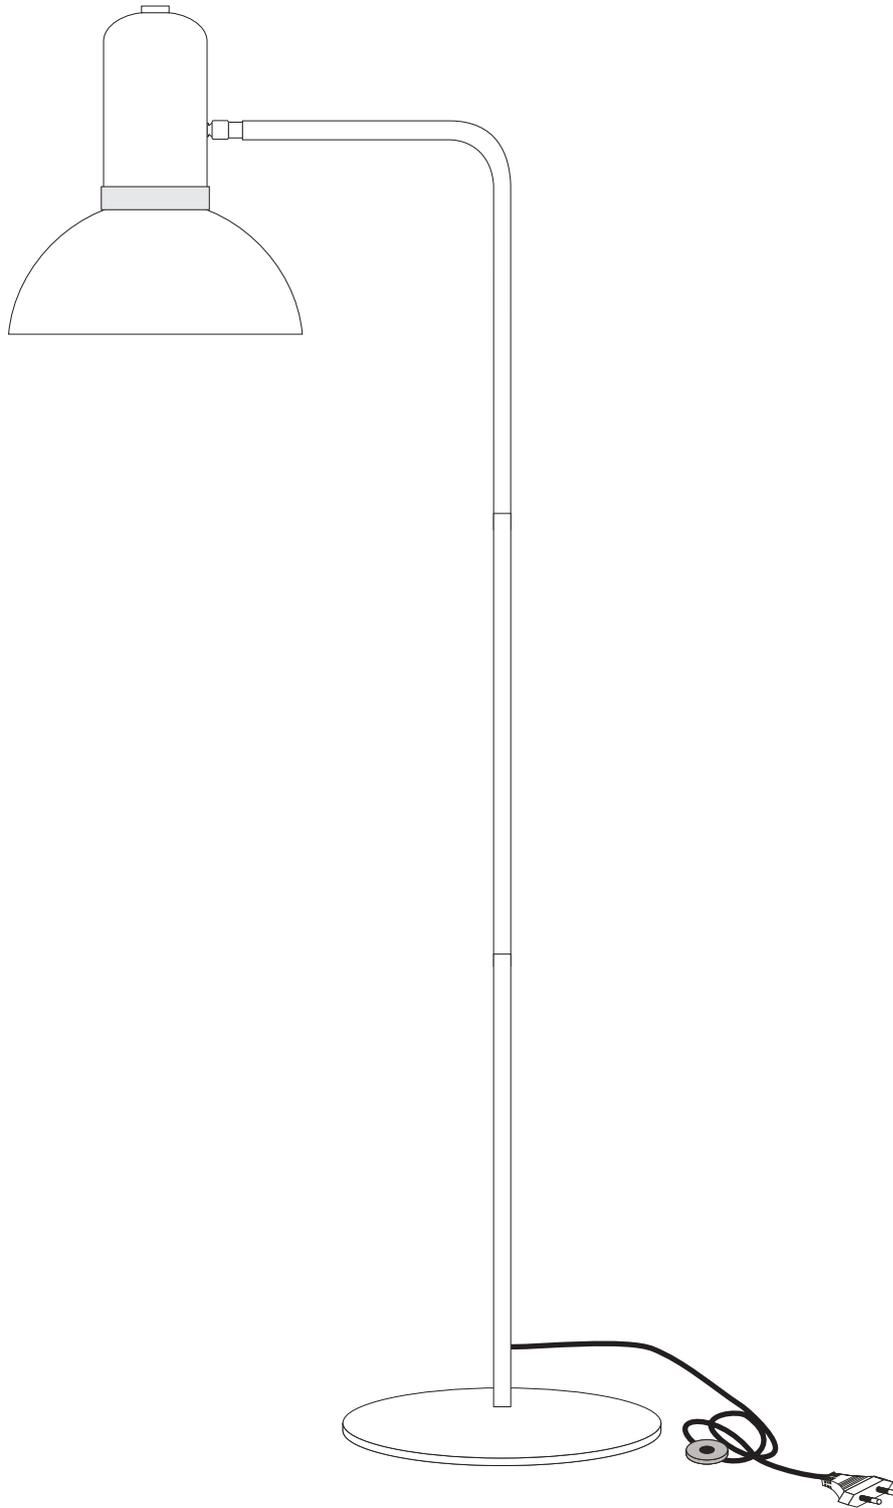

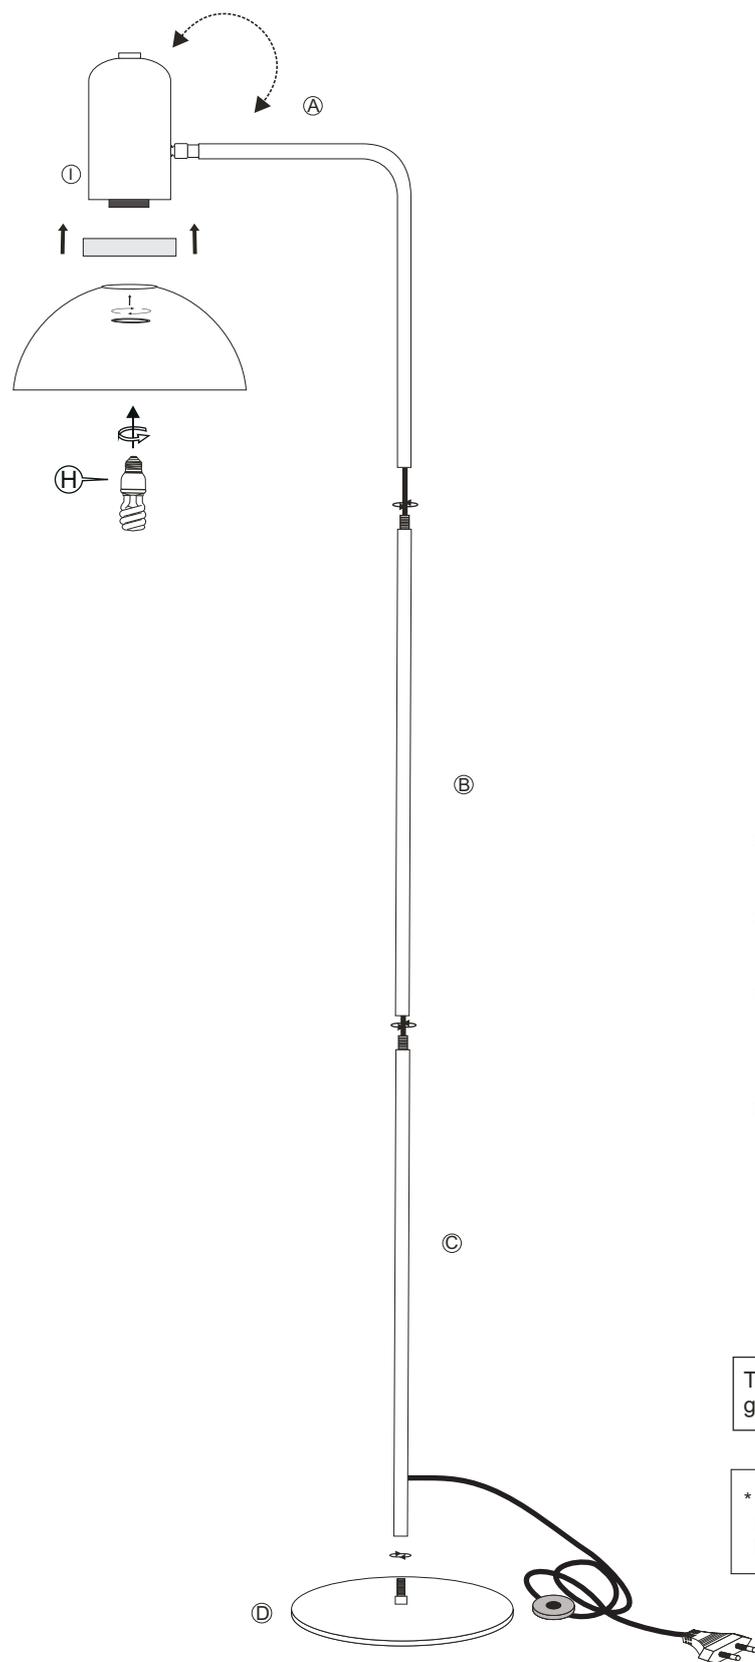

THIS ARTICLE REQUIRES ASSEMBLY

THE BOX INCLUDES

- | | |
|-----------------------|-----|
| (1) Shade Fixture | (A) |
| (2) Lamp Mid Stick | (B) |
| (3) Lamp Bottom Stick | (C) |
| (4) Lamp Base | (D) |

- (1) Carefully place the bottom stick (C) over the lamp base (D) and rotate clockwise to tighten.
- (2) Place the mid stick (B) over the bottom stick (C) and rotate clockwise to tighten.
- (3) Place the shade fixture (A) over the mid stick (B) and rotate clockwise to tighten.
- (4) Secure the Light Bulbs (H) E27 into the bulb holder (I).
- (5) The lamp is ready to use.

To prevent the risk of fire, do not use bulb with wattage greater than 23W CFL, 25W LED & 40W Regular Bulb.

* IF THE EXTERNAL FLEXIBLE CABLE OR CORD OF THIS FLOOR LAMP NEED TO BE CHANGED IT SHOULD ONLY BE REPLACED BY A QUALIFIED ELECTRICIAN